How to Connect Canon TS3522 Printer to New WiFi

A complete guide to wireless printing setup

INTRODUCTION

Why Wireless Printing Matters

Connecting the printer to WiFi is crucial for smooth **wireless printing**. Wireless printers are becoming popular because they are easy to use. Whether it's a college, school, organization, or a corporate office, a printer can be found everywhere.

This guide explains different methods '**How to Connect a Canon Printer to WiFi**'. Let's explore the step-by-step process.

SETUP GUIDE

Quick Setup Overview

01

Prepare Your Printer

Unbox and power on your Canon PIXMA TS3522 printer

02

Install Canon App

Download **Canon PRINT Inkjet/SELPHY App** on your phone

03

Enter Setup Mode

Press and hold the WiFi button for 3-5 seconds

04

Connect to WiFi

Use the Canon app or WPS push button method

Step 1: Prepare Your Printer

Unbox Your Printer

Unbox your **Canon PIXMA TS3522 printer** if it's brand new

Connect Power

Connect its power cord to the wall outlet and turn it on

Check Status

Ensure the printer's power light is solid and stable

Optimal Placement

Install in a clean, dry place near a wall outlet for easy use

Step 2: Install the Canon App

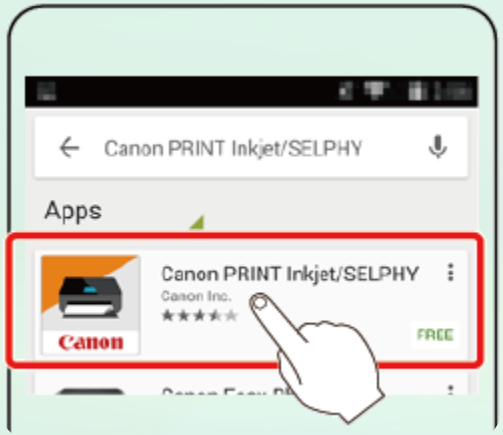

Install the **Canon PRINT Inkjet/SELPHY App** on your smartphone (**Android** or **iOS**).

1. Open the **Google Play Store** or **App Store**
2. Search for Canon PRINT Inkjet/SELPHY
3. Tap **Install** or **Get** button
4. Allow the app to install on your smartphone

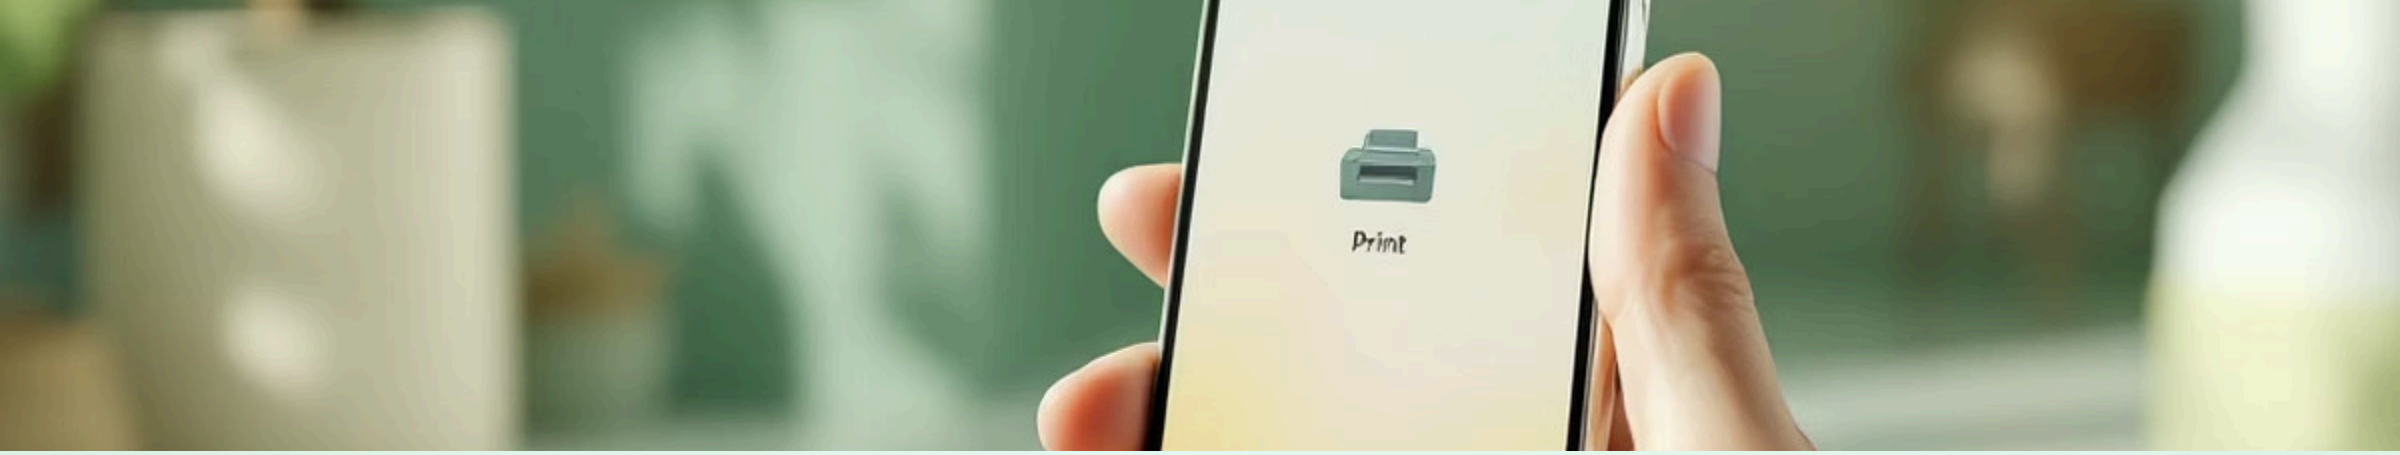

Connection Methods

Choose the method that works best for you to connect your printer to WiFi

Method 1: Canon App

Launch the Canon PRINT app, tap **Add Printer**, select **Register Printer**, and follow on-screen instructions to connect to your wireless network.

Method 2: WPS Button

Press the **WPS push button** on your router, hold the WiFi button on printer until blinking, press black button, then WiFi button again.

WPS SETUP

WPS Push Button Method

Router Setup

Find and press the **WPS push button** on your router

Printer Setup

Hold WiFi button until symbol blinks, press black button, then WiFi button

If your printer doesn't have a WPS button, navigate to **Settings** → **Wireless LAN** → **WPS push button** method → **Enable**

TROUBLESHOOTING

Fixing Connection Issues

Resolve common **wireless connection issues** with these proven methods

Restart Devices

Restart your printer, router, and computer to resolve connectivity problems

Update Drivers

Visit **usa.canon.com/support** to download latest printer drivers

Test Connection

Take a test print to verify successful wireless setup

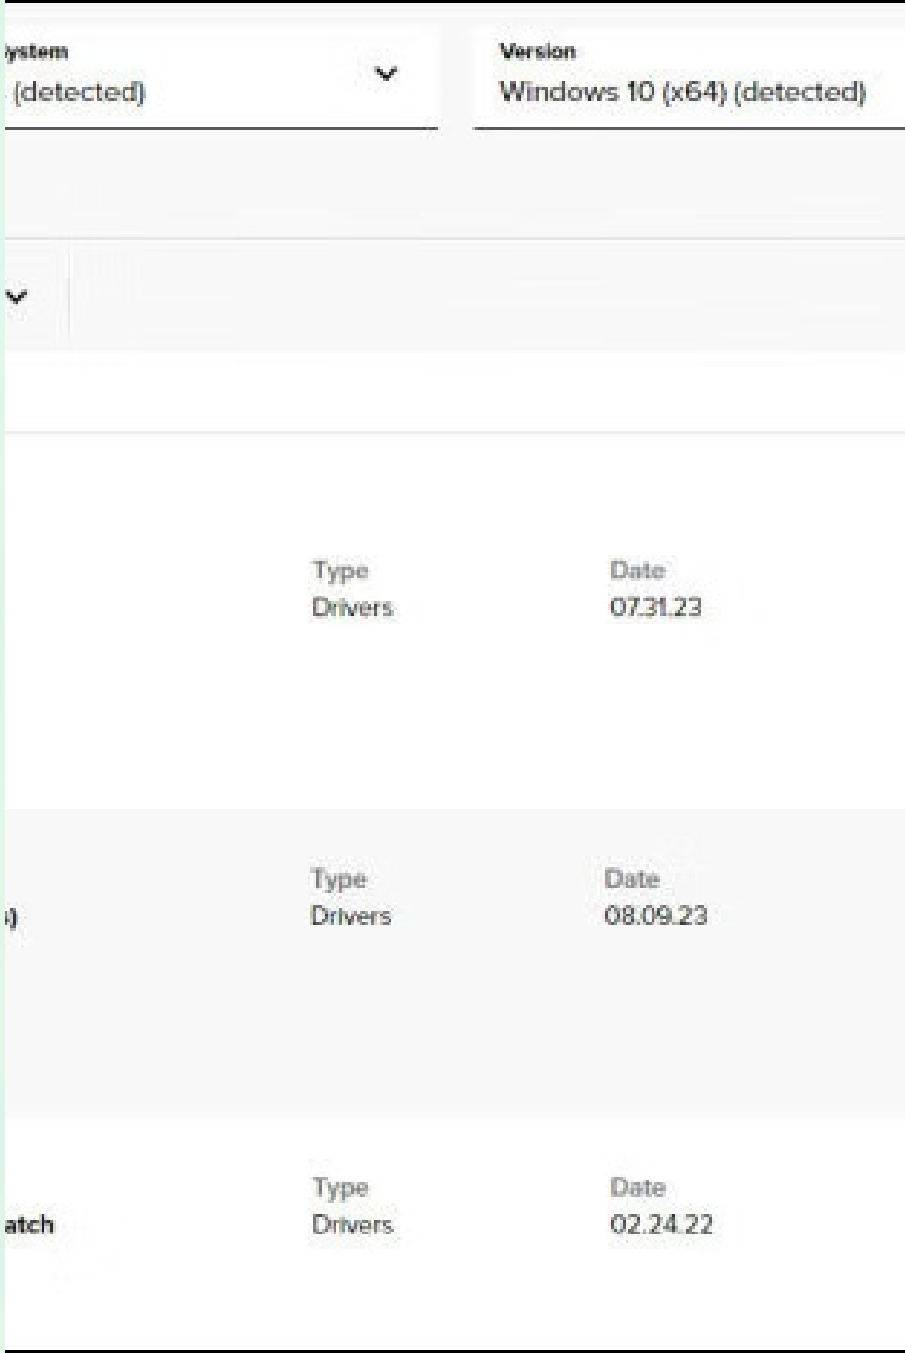

Frequently Asked Questions

How Do I Connect My Canon Printer to My Mobile Wirelessly?

Turn on printer, download **Canon PRINT Inkjet/SELPHY app**, ensure same network, open app, add printer, and select from list.

Why Is My Canon Printer Not Connecting to WiFi?

Common causes include technical bugs, outdated printer drivers, or poor internet connection. Check network, update drivers, and remove errors.

How Do I Ensure My Canon Printer Connects to WiFi?

Check printer proximity to router, ensure printer isn't set to offline, and verify WiFi light is flashing properly.